BAMKI 4E, 3W DEPARTURE

[USA] SL-2600 (GM)

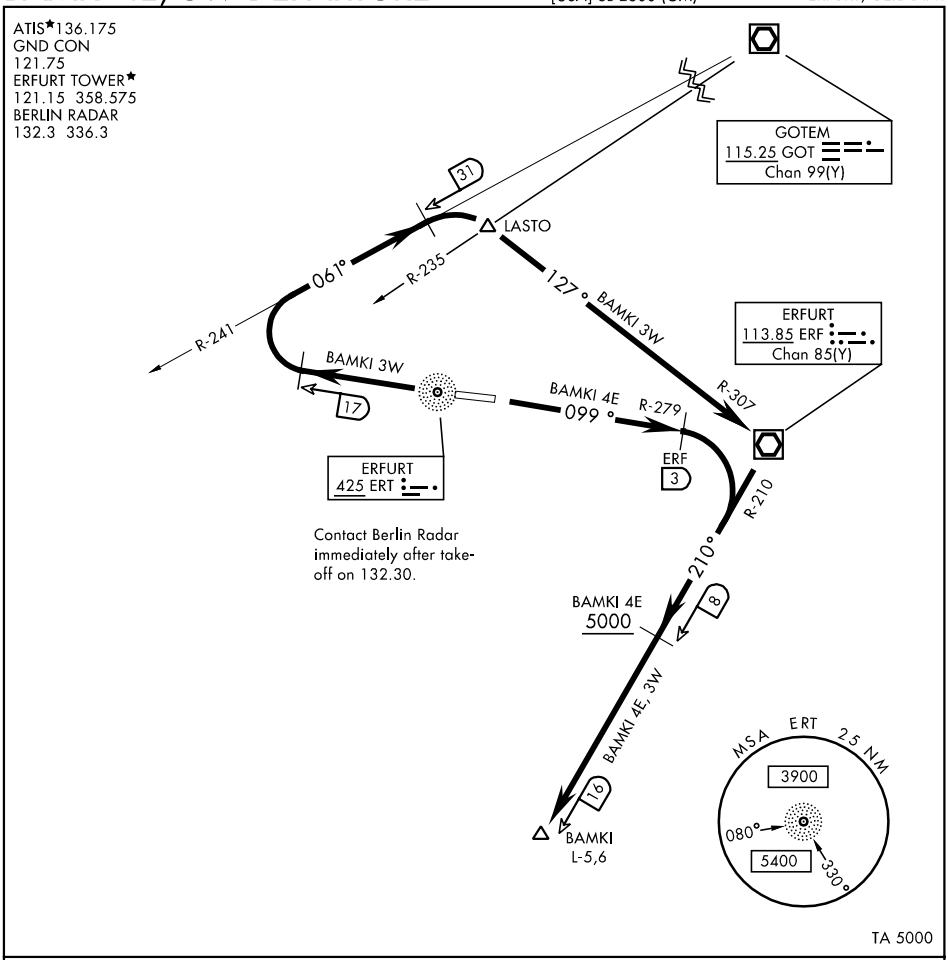

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF RWY 10:

BAMKI 4E: Climb to 5000 tracking 099° to ERF VOR/DME 3 DME, then turn right to join ERF R-210 to BAMKI. Cross ERF R-210/8 DME at or above 5000.

TAKE-OFF RWY 28:

BAMKI 3W: Climb to 5000 tracking runway heading via ERT NDB to ERF VOR/DME 17 DME, then turn right to join GOT VOR/DME R-241 to 31 DME, turn right to join ERF VOR/DME R-307 to ERF VOR/DME and R-210 to BAMKI.