PATIK ONE DEPARTURE [USN] SL-2570 (DGAC)

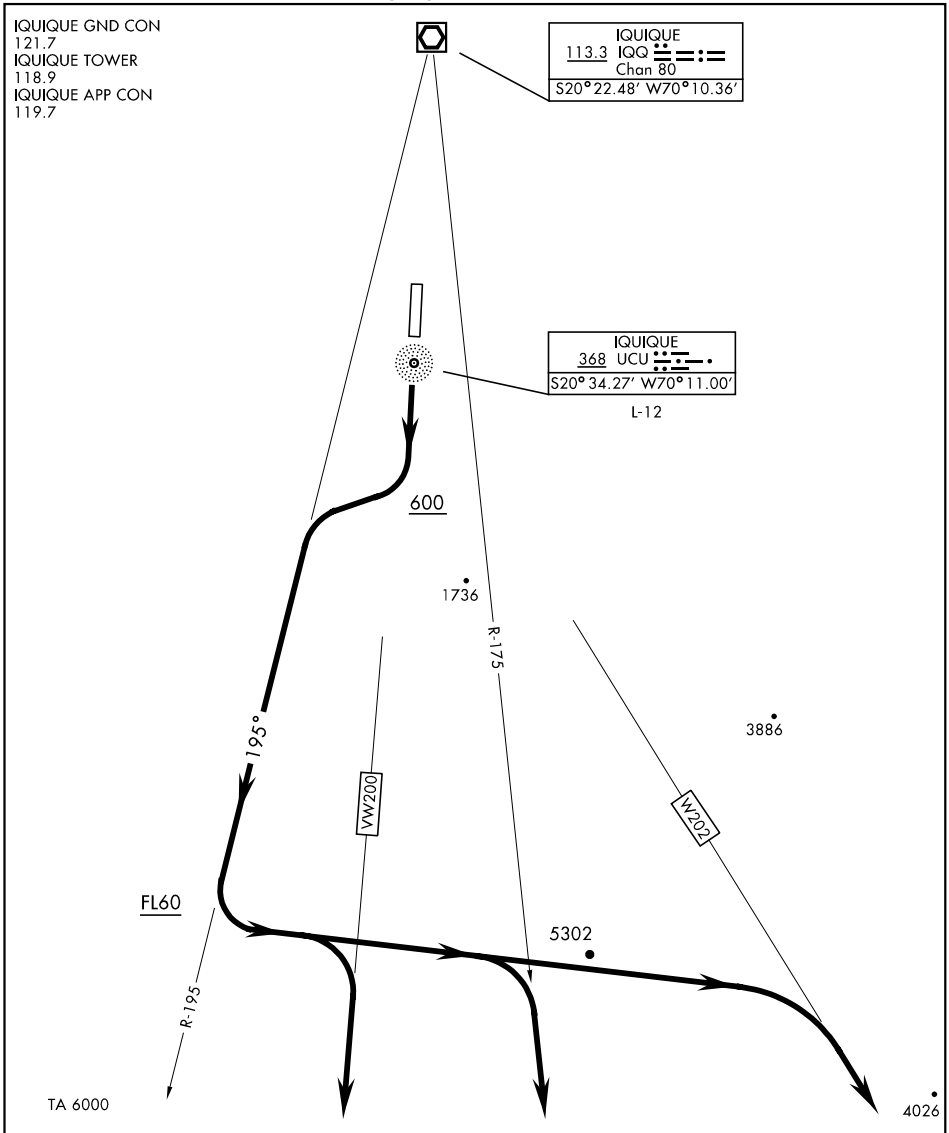

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF RWY 18: Climb on runway heading to 600, then turn right to intercept and climb on IQQ VOR/DME R-195 up to FL60, then continue via ATC clearance.